


FBTools

FBTools

smar
FIRST IN FIELDBUS

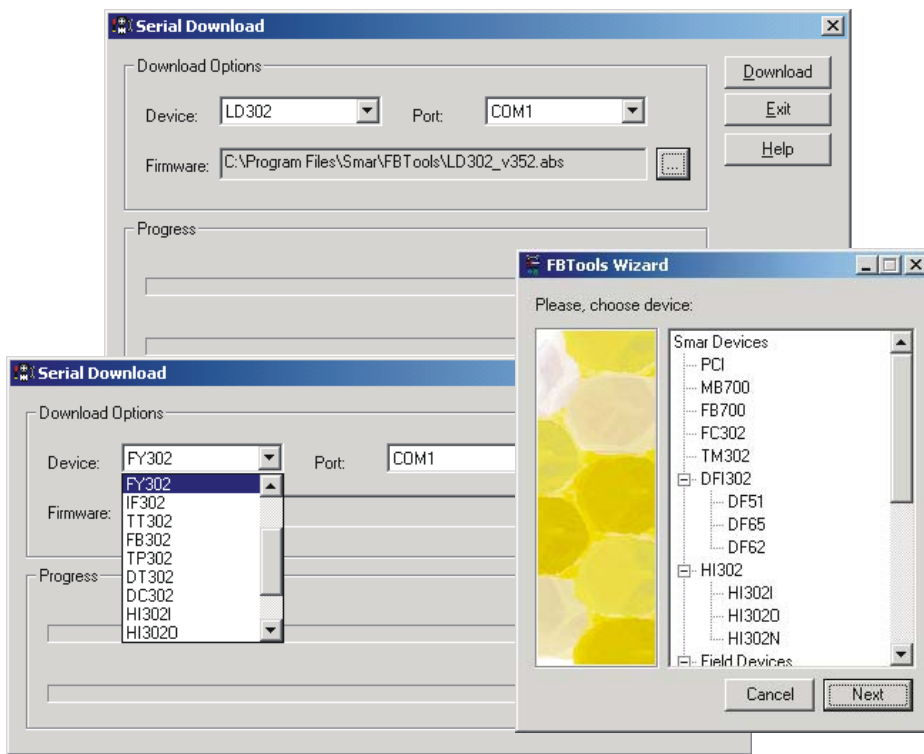

APR / 05
FBTools
VERSION 1.0



smar

web: www.smar.com

**Specifications and information are subject to change without notice.
For the latest updates, please visit the SMAR website above.**

BRAZIL

Smar Equipamentos Ind. Ltda.
Rua Dr. Antonio Furlan Jr., 1028
Sertãozinho SP 14170-480
Tel.: +55 16 3946-3510
Fax: +55 16 3946-3554
e-mail: smarinfo@smar.com

GERMANY

Smar GmbH
Rheingastrasse 9
55545 Bad Kreuznach
Germany
Tel: + 49 671-794680
Fax: + 49 671-7946829
e-mail: infoservice@smar.de

USA

Smar International Corporation
6001 Stonington Street, Suite 100
Houston, TX 77040
Tel.: +1 713 849-2021
Fax: +1 713 849-2022
e-mail: sales@smar.com

CHINA

Smar China Corp.
3 Baishiqiao Road, Suite 30233
Beijing 100873, P.R.C.
Tel.: +86 10 6849-8643
Fax: +86-10-6894-0898
e-mail: info@smar.com.cn

MEXICO

Smar México
Cerro de las Campanas #3 desp 119
Col. San Andrés Atenco
Tlalnepantla Edo. Del Méx - C.P. 54040
Tel.: +53 78 46 00 al 02
Fax: +53 78 46 03
e-mail: ventas@smar.com

FRANCE

Smar France S. A. R. L.
42, rue du Pavé des Gardes
F-92370 Chaville
Tel.: +33 1 41 15-0220
Fax: +33 1 41 15-0219
e-mail: smar.am@wanadoo.fr

SINGAPORE

Smar Singapore Pte. Ltd.
315 Outram Road
#06-07, Tan Boon Liat Building
Singapore 169074
Tel.: +65 6324-0182
Fax: +65 6324-0183
e-mail: info@smar.com.sg

Smar Research Corporation

4250 Veterans Memorial Hwy.
Suite 156
Holbrook , NY 11741
Tel: +1-631-737-3111
Fax: +1-631-737-3892
e-mail: sales@smarresearch.com

Introduction..... 1

 Before you begin..... 1

 Warning..... 1

 How to download a firmware..... 1

 Field Devices 2

 PCI302, DFI302 and Gateways 4

Introduction

FBTools is an utility software used to perform **Firmware Download** on any Smar Fieldbus equipment:

- PCI302 cards
- DFI302 Processors (DF51, DF62, DF65, etc)
- Field Devices
- Gateways (FB700, MB700, HI302,etc)

This allows the user to upgrade the firmware (executable program installed in the FLASH memory) of the equipment using the latest versions provided in SMAR Web Site: www.smar.com

NOTE

The firmware can be downloaded while the equipment is installed and turned on.

Before You Begin

- New firmware can be incompatible with old systems, and vice versa. Please contact Smar Technical Support if you are not sure about the compatibility with your current system.

Warning

- Equipment functionality **WILL STOP** (Function Blocks execution, links, supervision, scheduling, Fieldbus communication, etc.) while its firmware is being downloaded.
- Before proceeding to the next step, **CERTIFY THAT YOUR PROCESS WILL BE STABLE** under any condition described in this procedure.

How to Download a Firmware

1. Run *FBTools Wizard.exe*, choose a device, and then click the *Finish* button.
2. Depending on the chosen device (DFI302, PCI302 Card, Field Device or Gateways), follow the specific steps.

Field Devices

- LD302
- FI302
- FP302
- FY302
- IF302
- TT302
- FB302
- DC302
- DT302
- LD292
- FR302
- TP302

1. Choose a serial port.
2. Connect the FDI302 (Firmware Download Interface) to the PC serial port chosen in item 1 and to the equipment.



Figure 1 – Firmware Download Interface

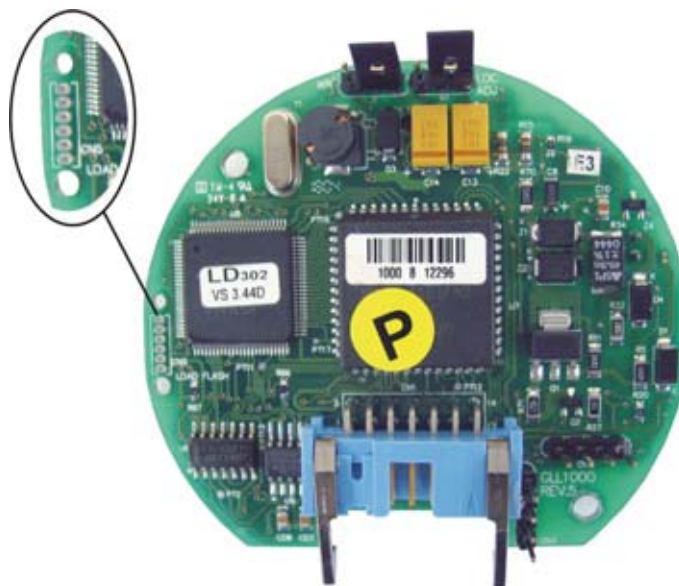


Figure 2 – Field Device's Connection Point with the FDI302


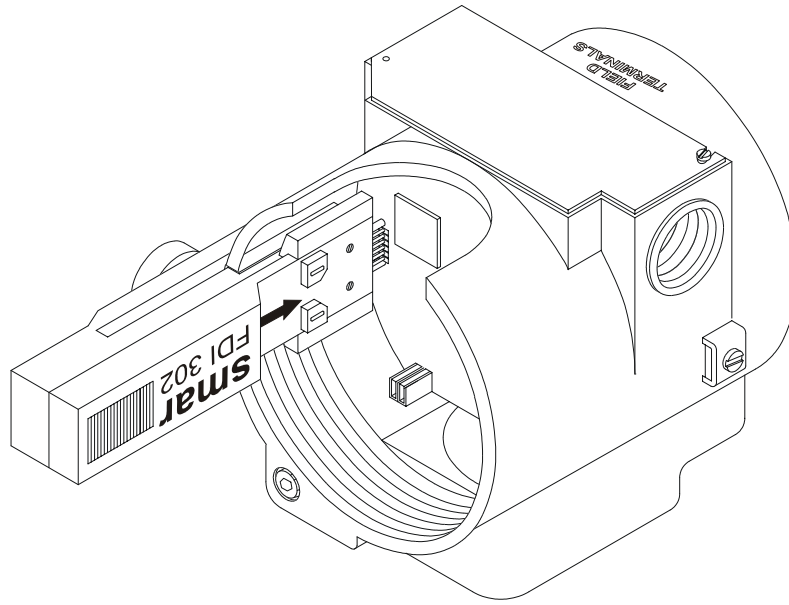


Figure 3 – Interface connected to the device

3. Select and open a *<name>.ABS* file (where *name* is the Field Device name - e.g. LD302 and *xx* is the firmware version).
4. Click the **Download** button to start the firmware download.

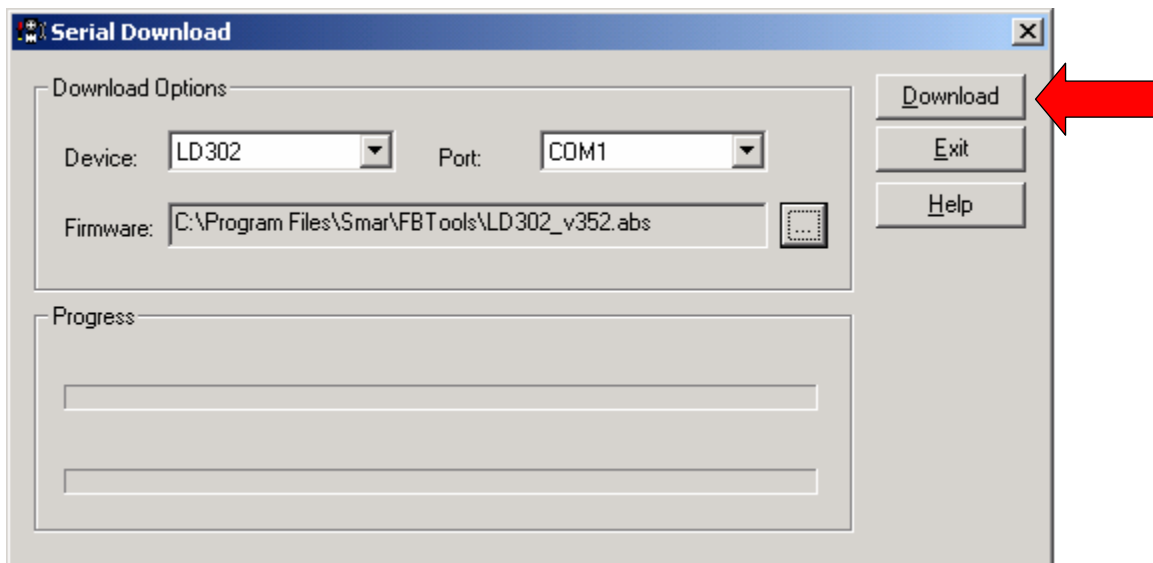

5. When the download is complete disconnect the FDI302.
6. Reset the Field Device.

NOTES

- Certify that no other application or resident program in the PC is using the I/O port or IRQ of the selected serial port.
- After resetting, the Field Device will automatically execute a factory initialization procedure (**Fact Init** appears on the display), if necessary.

PCI302, DFI302 and Gateways

- PCI302
- DFI302 Processors (DF51, DF62, DF65, etc)
- FB700
- MB700
- FC302 (AuditFlow)
- TM302
- HI302
 - HI302I
 - HI302O
 - HI302N

To update the firmware, please refer to the equipment user's manual.