


SOAP Wizard

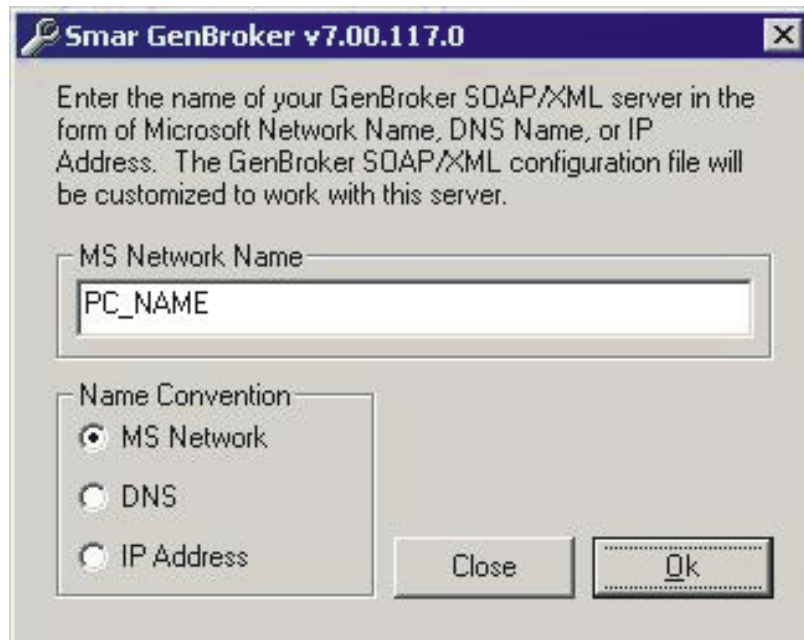

smar



web: www.smar.com

**Specifications and information are subject to change without notice.
For the latest updates, please visit the SMAR website above.**

BRAZIL

Smar Equipamentos Ind. Ltda.
Rua Dr. Antonio Furlan Jr., 1028
Sertãozinho SP 14170-480
Tel.: +55 16 3946-3510
Fax: +55 16 3946-3554
e-mail: smarinfo@smar.com

GERMANY

Smar GmbH
Rheingaustrasse 9
55545 Bad Kreuznach
Germany
Tel: + 49 671-794680
Fax: + 49 671-7946829
e-mail: infoservice@smar.de

USA

Smar International Corporation
6001 Stonington Street, Suite 100
Houston, TX 77040
Tel.: +1 713 849-2021
Fax: +1 713 849-2022
e-mail: sales@smar.com

ARGENTINA

Smar Argentina
Soldado de La Independencia, 1259
(1429) Capital Federal – Argentina
Telefax: 00 (5411) 4776 -1300 / 3131
e-mail: smarinfo@smarperifericos.com

MEXICO

Smar México
Cerro de las Campanas #3 desp 119
Col. San Andrés Atenco
Tlalnepantla Edo. Del Méx - C.P. 54040
Tel.: +53 78 46 00 al 02
Fax: +53 78 46 03
e-mail: ventas@smar.com

CHINA

Smar China Corp.
3 Baishiqiao Road, Suite 30233
Beijing 100873, P.R.C.
Tel.: +86 10 6849-8643
Fax: +86-10-6894-0898
e-mail: info@smar.com.cn

SINGAPORE

Smar Singapore Pte. Ltd.
315 Outram Road
#06-07, Tan Boon Liat Building
Singapore 169074
Tel.: +65 6324-0182
Fax: +65 6324-0183
e-mail: info@smar.com.sg

FRANCE

Smar France S. A. R. L.
42, rue du Pavé des Gardes
F-92370 Chaville
Tel.: +33 1 41 15-0220
Fax: +33 1 41 15-0219
e-mail: smar.am@wanadoo.fr

Smar Research Corporation

4250 Veterans Memorial Hwy.
Suite 156
Holbrook , NY 11741
Tel: +1-631-737-3111
Fax: +1-631-737-3892
e-mail: sales@smarresearch.com

Index

SOAP WIZARD.....	1
Setting Up Your GenBroker Server PC	1
Optimization.....	3

SOAP Wizard

Setting Up Your GenBroker Server PC

You must do the following to use SOAP/XML communications on the GenBroker server PC:

1. The server must have ProcessView Version 7.0 or higher installed.
2. The server must have Microsoft Internet Information Server (IIS) 5.0 or higher installed.
3. From **Start > Programs > Smar > ProcessView > Tools**, select the **SOAP Wizard**. This launches the **SOAP/XML Wizard**, shown in the figure below. This wizard will assist you in setting up your GenBroker SOAP/XML server. Enter the name of the PC that will be the SOAP server (should be the PC you are running the wizard on).

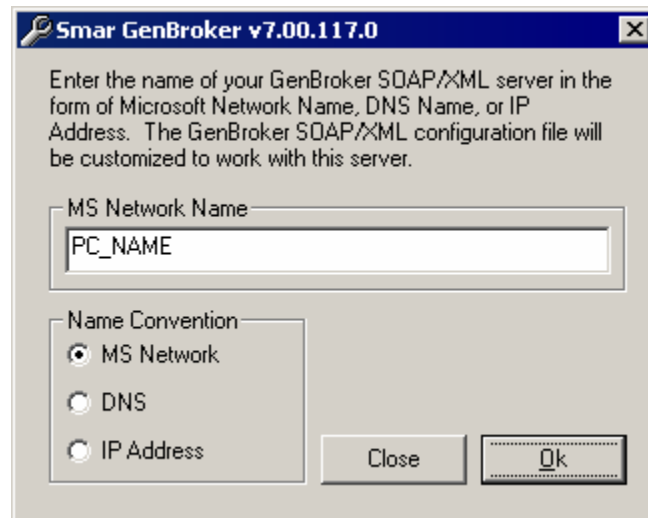


Figure 1. SOAP/XML Wizard

4. Add "Network" to the default launch and access permissions in DCOM:
 - Select **Start > Run** and type "DCOMCNFG" into the **Run** field. Press **Enter**.
 - Go to the **Default Security** tab in the **DCOM Configuration Properties** window, as shown in the figure below.

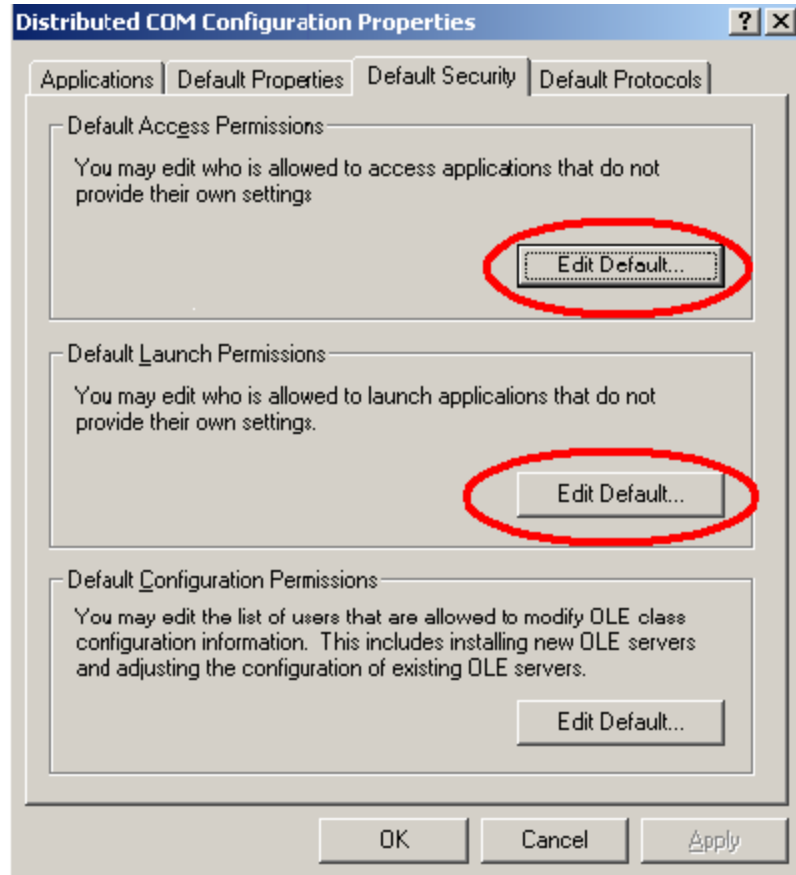


Figure 2. DCOM Configuration Properties

- Under **Default Access Permissions** click on the **Edit Default** button. This opens the Registry Value Permissions dialog box. In this dialog, you should make sure that **Network** is there. Otherwise click on **Add...** and select it from the list of local users and groups.
- Follow the same procedure as described above for the **Default Launch Permissions**.

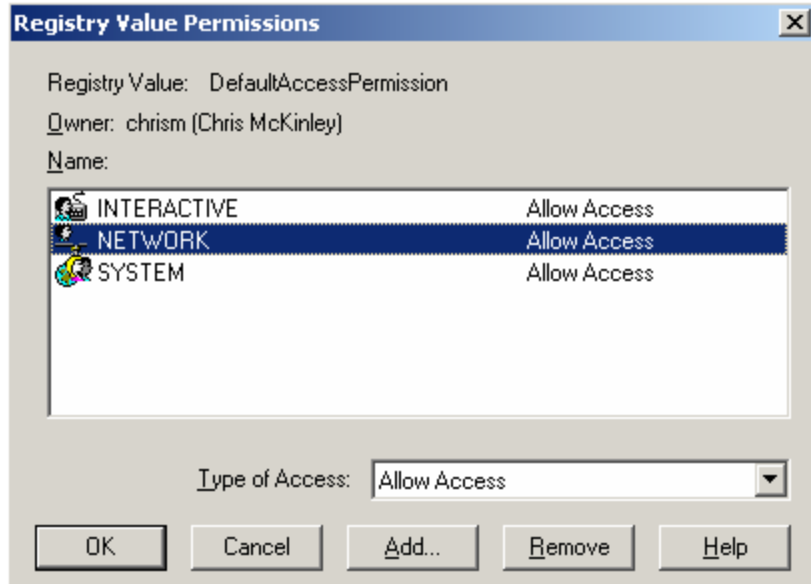


Figure 3. Registry Value Permissions

5. Do not set GenBroker as a service or start it manually; SOAP will take care of starting it if a call is made.
6. Reboot the PC. Now other PCs will be able to use your PC as a GenBroker server over SOAP.

Optimization

Disable the TCP/IP server in the **GenBroker Server** tab of the GenBroker Configurator, as shown in the figure below. The TCP/IP Initialization code slows down the GenBroker.exe module initialization, causing a delay the first time it is started.

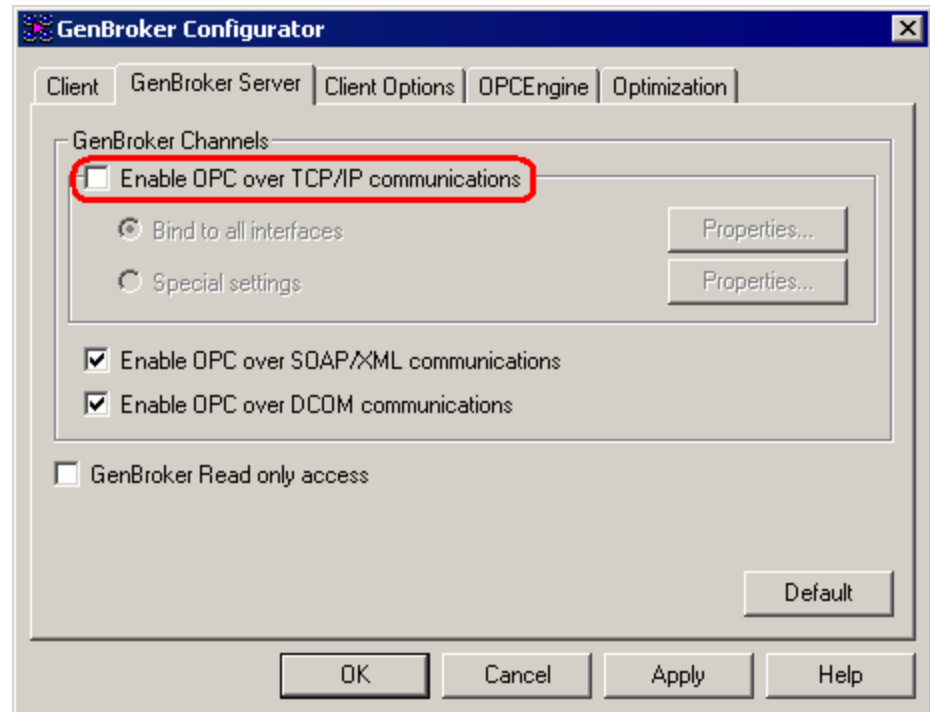


Figure 4. Disabling TCP/IP Communications

